

MODEL 35994 - CANGUN


ASSEMBLY INSTRUCTIONS

IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE GAZEBO BEFORE USE TO BECOME FAMILIAR WITH THE ASSEMBLY. FOR THIS MODEL, IT IS RECOMMENDED TWO PEOPLE BE INVOLVED IN SETUP.

NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.

STEP 1: Spread gazebo out on the ground so the underside is facing up.

STEP 2: Locate the two fiberglass pole sections. Each pole section is shock corded together. Extend each section. Insert the ends of one of the fiberglass poles into the pockets located at the sides of the gazebo. Insert the ends of the remaining fiberglass pole into the pockets located at the front and rear of the gazebo.

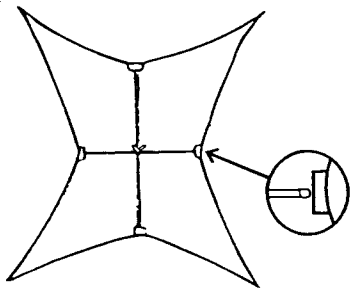

STEP 3: Each of the ridge poles consist of four metal sections chain corded together. Carefully, extend each of the sections by joining them together at the swages to form each section into the shape of an arc. Slide each section through the sleeves on the gazebo.



STEP 4: Using ties located in the center of gazebo tie the fiberglass and metal poles into place.


STEP 5: Locate the four metal pole sections. Extend each section. While leaving gazebo on the ground, join the bent end of the metal section to one end of the metal ridge pole sections, which were inserted into the sleeves. Repeat for the remaining three pole uprights.

STEP 6: Secure gazebo to frame by fastening the self-fasteners on the gazebo around the metal frame.

STEP 7: With the help of another person, flip gazebo over so it is upright. Attach the "J" hooks on the corners of the gazebo into the open ends of the metal uprights. Adjust tension as necessary.

STEP 8: Stake down gazebo by inserting a stake through the webbing loop at each corner. Hammer stakes into the ground at a 45° angle, by using a hammer or mallet.

Gazebo should appear as shown

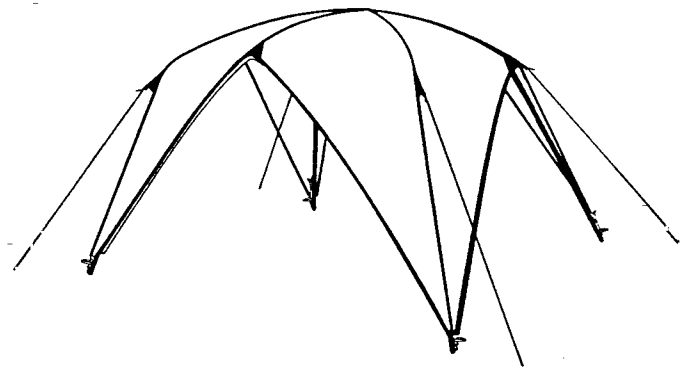

STEP 9: Guy ropes are provided for windy conditions. Tie guy rope to the loop located at each upper corner of the gazebo and stake down with a loop make with the slider. Adjust sliders as necessary.

NOTE: To take down gazebo, follow above steps in the reverse order. Place stakes into stake bag, which is provided.

Fold into thirds. Start a small, tight roll and roll. Once rolled, tie a string or rope around gazebo hold into place. Slide the gazebo, frame and stakes into carry bag. Make sure gazebo is clean and dry before storing.

SAFETY AND CARE WARNING!

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent is made with flame resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIREPROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

CAMPING TIPS

DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Never use fuel burning, oxygen consuming devices (i.e. heaters, lanterns, cooking stoves or other flame sources) inside your tent.

DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

DO NOT LEAVE YOUR GAZEBO SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE GAZEBO ON CONCRETE FLOOR.


Your gazebo fabric is water repellent. However, it is not waterproof. Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.



REPLACEMENT PARTS

If you have questions or need to order a part, call 1-800-325-TENT or log into our website at www.wenzelco.com. Please have your model number and part number ready when you call.

DO NOT ORDER BY REFERENCE KEY NUMBER.

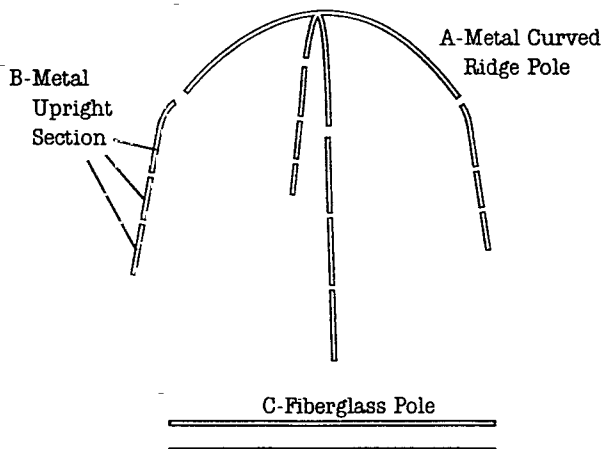

Send your request for parts to: **The Wenzel Company**
113 Industrial Drive
New Haven, MO 63068

KEY NO.	MODEL NO. 35994		QTY. REQ
	DESCRIPTION	PART NO.	
A	Metal Curved Ridge pole	99-2005B	2
B	Metal upright Section	99-2006B	4
C	Fiberglass Pole	99-0026	2
	Complete Frame	53592500	1