

# MODEL 35997 - CHEYENNE

## ASSEMBLY INSTRUCTIONS

**IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY. IT IS RECOMMENDED TWO PEOPLE BE INVOLVED IN SET UP.**

**NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.**

 
To prolong the life of the tent floor, select a level, clean area for the campsite.

To prevent damage to the zipper, unzip the doors to allow air to enter the tent.


**STEP 1:** Remove frame from box and extend each of the chaincorded pole sections

**STEP 2:** Spread tent out flat, floor side down. Insert stakes through stake loops at each corner. Stake down tent by hammering each stake at a 45° angle with a hammer or mallet, making sure to pull tent out even and tight. Stake down remaining loops.

**STEP 3:** Each of the three ridge poles of the frame consist of two bent pole sections, one with a plain end and one with a swage. Join these sections together by sliding the straight end of each pole through the webbing loops and sleeves on the tent roof and join poles together by inserting the swaged ends into the plain ends of the poles. Pull webbing loops over curve and attach to C-clips on the frame.

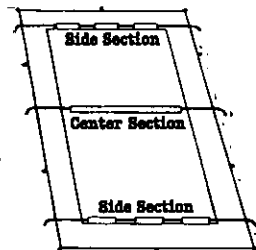

**STEP 4:** Locate the two center upright sections, which consist of two shorter steel poles which are chaincorded together and one friction lock pole (this pole has a plastic clamp attached at one end.) Making certain the end of the steel pole with a hole drilled near the top for the fly attachment is up, insert the bottom end through the plastic clamp and into the steel pole section. Repeat with the other center upright section. Join each upright section to the curved end of the center ridge pole.

 

**STEP 5:** With the help of another, on the opposite side, lift and push up on the upright sections to raise tent. Once raised, attach tent to frame.

**STEP 6:** There are four side upright sections with holes drilled near the top. Extend all four pole sections and join one of these side uprights to each end of the side ridge pole sections. Lift and push up frame until tent is pulled out evenly. Try door zippers. If they are hard to open and close, adjust the frame legs slightly to reduce tension on the zipper.

**STEP 7:** Place fly over the tent and attach hooks on the fly corners into the holes located on each of the steel uprights. Tie guy ropes through loops on each side of the fly. Make a loop at the opposite end of the guy rope by using slider and place loop over tent stake. Adjust slider to make guy rope tight. Stake down.

**STEP 8:** Extend remaining poles, color coded green, to form three canopy poles. Place the pointed end of each pole through each grommet on the canopy. The longer pole is for the center of the canopy.

Tie a guy out rope to the point of the center canopy pole. Pull rope straight out and stake down. Repeat same step for corner poles, pulling rope out at a 45° angle to the tent and stake down.

Assembled tent should appear as shown.



A divider curtain is included to divide your tent into two rooms

Convenience pockets are provided for storing small camping gear.

**NOTE:** To take down tent, follow steps above in the reverse order. Be sure to leave tent unzipped. Place stakes into stake bag, which is provided.

To roll tent up, fold into thirds lengthwise toward the door. At opposite end of the door, start a small tight roll and roll toward the door. Once rolled, tie a string or rope around tent to hold into place. Slide tent, frame and stakes into carry bag. Make sure tent is clean and dry before storing.

# SAFETY AND CARE WARNING!

**KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.** This tent is made with flame resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIREPROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

## DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Never use fuel burning, oxygen consuming devices (i.e. heaters, lanterns, cooking stoves or other flame sources) inside your tent.

## DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

**DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY.** THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE TENT ON CONCRETE FLOOR.

 
Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.



## REPLACEMENT PARTS

If you have questions or need to order a part, call 1-800-325-TENT or log into our website at [www.wenzelco.com](http://www.wenzelco.com). Please have your model number and part number ready when you call. **DO NOT ORDER BY REFERENCE KEY NUMBER.**

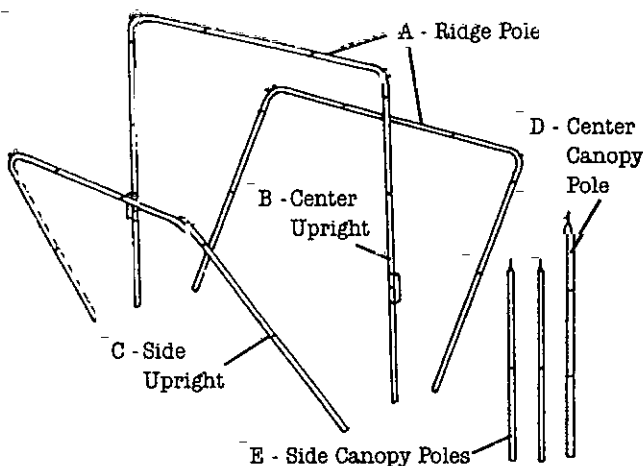

Send your request for parts to: **The Wenzel Company**  
113 Industrial Drive  
New Haven, MO 63068

KEY NO.	MODEL NO. 35997		QTY. REQ
	DESCRIPTION	PART NO.	
A	Ridge Pole	00-0062B	3
B	Center Upright	00-0063B	2
C	Side Upright	00-0064B	4
D	Center Canopy Pole	98-0046B	1
E	Side Canopy Pole	98-0045B	2
	Complete Frame	53599700	1