

Model 36150 – Galaxy

Patent No. D478, 648

Assembly Instructions

Important: We advise you to assemble the tent once before you go camping to become familiar with the assembly of the tent. For this model, it is recommended that two people be involved with the set up operation. Please look at the replacement parts diagram to see how your frame is assembled.

Note: To prolong the life of the tent floor, select a level, clean area for the campsite. To prevent damage to the zipper, unzip the doors prior to tent setup, to allow air to enter the tent. To improve the weather resistance of your tent, it is advisable to use seam sealer to coat all exposed seams. You should apply only to the underside of the fly and inside seams of the tent. If applied to the outside of seams, discoloration of your tent may occur. Seam sealer is available at the camping section of your local sporting good store. For your convenience and improved tent functionality, we have developed a self-contained storm flap pocket. Simply unzip the storm flaps covering the windows and doors and drop into the pocket that has been formed between the bottom of the storm flap and the mesh window.

 
Warning: During assembly of the main room and side room tent poles (Steps 5 and 7), the tent poles are in tension. If the poles are not held firmly in place by adults during assembly, the tension in the poles may cause them to break or one end of the pole to flip up, which could cause serious injury to you or others involved in assembling of the tent. To avoid this hazard:

- **Do have** two adults involved in assembling the tent.
- **Do have** one adult hold the end of the tent pole and place over the pin at the rear of the tent, while the second adult gently raises the roof of the tent and the crossed tent poles. When the tent and poles are raised, the first adult who is at the rear of the tent goes to the front of the tent and completes the pole connection at the front of the tent.

Step 1: Spread tent out flat, floor side down.

Step 2: And fiberglass frame sections by pulling out each section and placing it into the metals ferrule. You will have six pole sections. The three longest poles (A) are for the main tent room, the next two longest poles (B) are the side room poles. The remaining, shortest pole (C) will be used for the fly.


Step 3: There are six pole sleeves located on the roof of the tent. While making sure sleeves are in line with each other, slide an end of each of the three longest fiberglass poles (A) through the sleeves that are opposite each other. Straighten the sleeves along the fiberglass sections. Position poles so that they cross at the center roof of the tent.

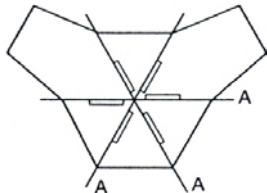

Step 4: Starting at the rear of the tent, locate the pin and rings at the base of the tent and insert one of the pins into the end of the corresponding pole. You will notice there are two pins attached to the rings at the rear and sides of the tent. One pin is for the main room tent pole and the other pin will be used for the side room pole.



 Step 5: (Please read and follow the important safety warning that appears before step 1.) While one adult holds the end of the tent pole firmly in place over the pin at the rear of the tent, the other adult should now go into the front door of the tent and gently lift the roof of the tent and the crossed tent poles up off the ground. When the tent and poles are raised, the first adult who is at the rear of the tent, goes to the front of the tent, flexes the fiberglass pole and places the ferrule at the end of the main tent pole over the pin at the base of the tent. Repeat step for the other main tent pole. Clip plastic hooks to the fiberglass frame poles. Tie frame poles to tent with fabric ties at the center of tent roof.

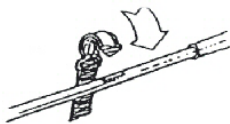

Step 6: Insert stakes through the rings located at each corner of the main tent room. Stake down main room by hammering each stake into the ground at a 45-degree angle, making certain to pull the main room out tight, so there are no wrinkles in the inside tent floor.

Step 7: (Please read and follow the important safety warning that appears before step 1.) To assemble the side rooms, locate the longer remaining fiberglass poles (B). Insert one of the pole sections through the pole sleeve at the top of the side room. With an adult on each end of the side room pole, gently flex the pole into an arch and place the ferrules at the end of the side room pole, gently flex the pole into an arch and place the ferrules at the end of the fiberglass pole over the pins at the base of the tent. Repeat the same procedure for the remaining side room. Clip plastic hooks to frame.

 
Step 8: Stake down the side rooms by inserting tent stakes through the webbing stake loops and hammering stakes into the ground at a 45-degree angle, making sure the tent rooms are pulled out even and tight. Tent should appear as shown:



Step 9: Unfold the fly. Place fly over the tent, with the awning above the front door. Attach the hooks on the fly to the loops on the sides of the tent. Fasten the Velcro fasteners, sewn to the edge of the fly, around the fiberglass tent poles.

Step 10: Insert the fly pole (C) into the sleeve at the very edge of the fly awning, over the front door. Flex fiberglass fly pole and insert each end into the reinforced metal grommets located on either side of front door.

Step 11: There are guy loops located on the fly of the tent. Tie the four guy ropes to the loops on the fly edges over the side doors. Make a loop at opposite end of guy rope by using a slider (as shown) and place loop over tent stake. Adjust slider to make guy rope tight. Extra tent stakes have been included for this.

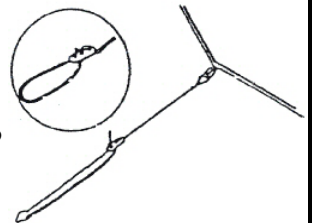

Tent should appear as shown.



Note: Divider curtains are included which can be used to divide your tent into separate rooms. Simply attached to the loops located at the ceiling and sidewalls, inside your tent. Also, convenience pockets are provided for storing small camping gear.

To take down tent, follow the above steps in the reverse order. Be sure to leave doors unzipped. Place stakes into stake bag and poles into pole bag, which are provided. The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay it on top of tent. Start a small tight roll, the width of your carry bag, with the pole bag placed at the end opposite the door. Roll tent toward door to allow air to escape. Once rolled, tie string around tent and slide into carry bag. Make sure tent is clean and dry before storing.

Safety And Care Instructions

Warning!

Keep all flame and heat sources away from this tent fabric! This tent is made with flame resistant fabric, which meets CPAI-84 specifications. **It is not fireproof.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

Danger:

Stoves, lanterns candles, grills heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in this tent. Use of such devices in this tent will cause asphyxiation, carbon monoxide poisoning, and death or serious permanent injuries. For this reason:

- DO NOT use fuel burning devices inside or near this tent
- Your failure to follow this warning will cause death or serious and permanent injury to you or others using this tent.

DO NOT ...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended
3. Do not leave children unattended inside a tent
4. Do not use heating, lighting or cooking equipment with open flames in or near tents
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.

Do ...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

Do not leave your tent set up in direct sunlight longer than necessary.

The sun's ultraviolet (UV) light degrades almost every fabric and material. If left in the sunlight for prolonged periods of time, fabric will fade and weaken. **Do not store tent on concrete floor.**

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.

 


Replacement Parts

If you have any questions or need to order a part, call 1-800-325-8368 or log into our website at www.camping-n-gear.com Please have your model number and part number available.

DO NOT ORDER BY REFERENCE KEY NUMBER

Send your request for parts to: **The Wenzel Company**
113 Industrial Drive
New Haven, MO 63068

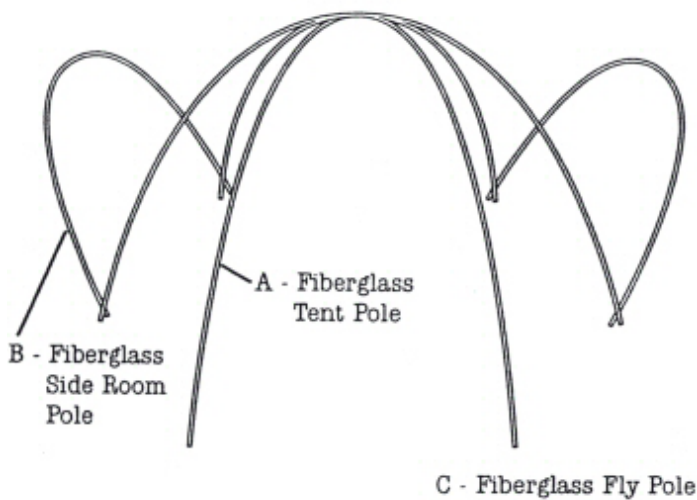

| Key Number | Model No. 36150 | | Qty. Req. |
|------------|----------------------|-------------|-----------|
| | Description | Part Number | |
| A | Fiberglass tent pole | 93-0061 | 3 |
| B | Side room pole | 03-0032 | 2 |
| C | Fiberglass fly pole | 03-0033 | 1 |
| | Complete frame | 36150FR | 1 |
| | Replacement fly | 36150FLY | 1 |
| | Divider curtain | 36150DC | 1 |
| | Guy ropes | A1001 | 4 |
| | Stakes | 7.5 STAKE | 14 |