

## Model – WG31205

### Assembly Instructions

**Important:** We advise you to assemble the tent once before going camping to become familiar with the assembly. It is recommended two people be involved in the set up operation

**Note:** To prolong the life of the tent floor, select a level, clean area for the campsite. To prevent damage to the zipper, unzip the doors, prior to tent set-up, to allow air to enter tent. To improve the weather resistance of your tent, it is advisable to use seam sealer to coat all exposed seams. You should apply only to the underside of the fly and inside seams of the tent. If applied to the outside seams, discoloration of your tent may occur. Seam sealer is available at the camping section of your local sporting good store. For your convenience and improved tent functionality, we have developed a self-contained storm flap pocket. Simply unzip the storm flaps covering the windows and doors and drop into the pocket that has been formed between the bottom of the storm flap and mesh the window.

**Note:** Please look at the replacement parts diagram to see how your frame is assembled. Your Wenger tent is color-coded for easier set up. Each frame pole will follow a line that has consistent color-coded frame to tent connections.

**Step 1:** Spread tent out flat, floor side down.

**Step 2:** Extend fiberglass tent frame sections by pulling out each section and placing it into the metal ferrule. You will have six pole sections. The four longer poles, which are the same length, will be the tent poles (A). The two remaining, shorter poles will be used for the fly awnings (B).

**Step 3:** While making sure the color-coded sleeves are in line with each other, slide to of the tent poles (A) through the sleeves that are opposite each other on the roof of the tent. Straighten the sleeves along the fiberglass sections. Insert the two remaining tent poles through the sleeves at the front and rear of the tent. The front and rear poles should go over the main tent poles.

**Step 4:** Starting at the back of the tent, insert pins located at the floor edge of the tent into the ferrules at the ends of the fiberglass frame sections, matching the colored webbings at the base of the tent to the same colored sleeve coding for each line of the tent poles.

 
**Step 5:** One person should now go into the front door of the tent and gently lift the roof of the tent and the front tent poles up off the ground. The other person should carefully flex the tent poles, one at a time, and insert the pin at the front base of the tent into the ferrule at the free end of the tent pole, following the same colored coding for each line.

Repeat this step with the three remaining tent poles. Clip plastic hooks to the fiberglass frame poles.

**Step 6:** Stake down tent by inserting stakes through stake loops on the floor edge of the tent. Hammer stakes into ground at a 45-degree angle by using a hammer or mallet, making sure to pull tent out even and tight.




**Step 7:** Unfold fly and stretch out all corners. Place the fly over the tent, making certain the fly awnings are over the front and rear door. Attach fly to tent by first loosening the Web straps on-the-fly corner buckles and then connecting the buckles to the side release buckles located near the base of the tent.





**Step 8:** Locate the two fly poles (B). Each pole will consist of three straight fiberglass sections, joined with two free bent ferrules. Each pole, after extension, will be in a "U" shape. Insert an end of the fly pole through the sleeve at the very edge of the awning over the front door. Flex the fiberglass fly pole and insert each end into the reinforced metal grommets located on either side of the front door. Repeat this step with the remaining fly pole and the fly awning over the rear door.

 **Step 9:** Secure the fly to the tent by going around the tent and tightening all buckles evenly. Wrap the Velcro fasteners at each corner of the fly around the fiberglass tent poles. Tent should appear as shown.

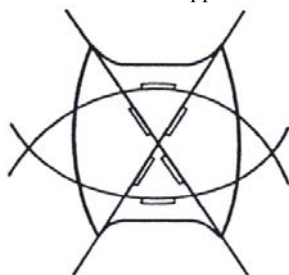

**Step 10:** Guy ropes have been provided for the sides of your fly. Attach the guy ropes to the loops, located on the sides of the fly. Stretch the guy ropes out tight and using a loop at the opposite end, place loop over tent stake. Adjust with slider to make guy rope tight and stake down. It is recommended to pull the guy rope out away from the tent, as long as possible, to lift the fly away from the tent wall.

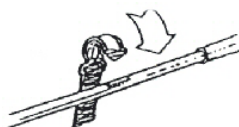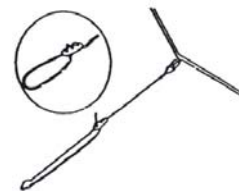  

**Note:** To take down tent, follow steps above and the reverse order. Be sure to leave doors and windows unzipped. Place stakes into stake bag and poles into pole bag, which are provided.

The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay it on top of tent. Start a small tight roll, the width of your carry bag, with the pole bag placed at the end opposite the door. Roll tent toward door to allow air to escape. Once rolled, secure with straps. Slide tent and stake bag into carry bag. Make sure tent is clean and dry before storing. To prolong the life of the tent floor, always select a level, clean area for the campsite. Store in a dry area off of concrete floor.



## Assembly Instructions

### Warning!

**Keep all flame and heat sources away from this tent fabric.**

This tent is made with flame resistant fabric, which meets CPAI-84 specifications. **It is not fireproof.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render flame-resistance properties ineffective.

### Danger:

Stoves, lanterns, candles, grills, heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in this tent. Use of such devices in this tent will cause asphyxiation, carbon monoxide poisoning, and death or serious and permanent injuries. For this reason:

#### DO NOT ...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.

#### Do ...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

#### Do not leave your tent set up in direct sunlight longer than necessary.

The sun's ultraviolet (UV) light degrades almost every fabric and material. If left in sunlight for prolonged periods of time, fabric will fade and weaken. UV damages not covered by the manufacturers warranty. Do not store tent on concrete floor.

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to ridged specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the frame to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.

### Send your request for parts to:

American Recreation Products, Inc.  
1224 Fern Ridge Parkway  
St. Louis, MO 63141-4451

 


**Maker of the Genuine Swiss Army Knife**

### Replacement Parts

If you have questions or need to order a part, call 888 797-2769  
Have your model number and part number ready when you call.

**Do not order by reference Key number**

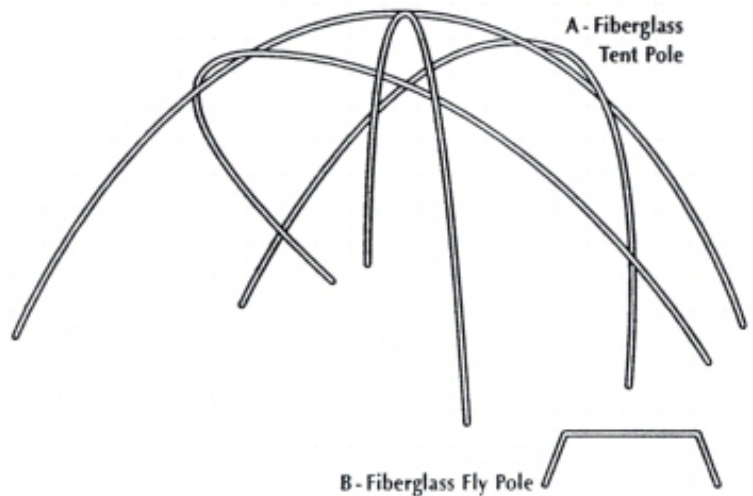

Key Number	Model No. WG31205		Qty. Req.
	Description	Part Number	
A	Fiberglass tent pole	02-0064	4
B	Fiberglass fly pole	02-0065	2
	Complete frame	WG30205FR	1
	Replacement fly	WG30205FLY	1
	Mud mat	WG30205MAT	1
	Gear organizer	WG30205GO	1
	Plastic stakes	7.5 Stake-WG	10
	Metal stakes	Pin Stake	12
	Guy ropes	A1001-WG	2

**If you have any questions you may also visit our website at: [www.camping-n-gear.com](http://www.camping-n-gear.com)**