

Model – WG31203

Assembly Instructions

Important: We advise you to assemble the tent once before going camping to become familiar with the assembly. It is recommended two people be involved in the set up operation

Note: To prolong the life of the tent floor, select a level, clean area for the campsite. To prevent damage to the zipper, unzip the doors, prior to tent set-up, to allow air to enter tent. To improve the weather resistance of your tent, it is advisable to use seam sealer to coat all exposed seams. You should apply only to the underside of the fly and inside seams of the tent. If applied to the outside seams, discoloration of your tent may occur. Seam sealer is available at the camping section of your local sporting good store. For your convenience and improved tent functionality, we have developed a self-contained storm flap pocket. Simply unzip the storm flaps covering the windows and doors and drop into the pocket that has been formed between the bottom of the storm flap and mesh the window.

 
Note: Please look at the replacement parts diagram to see how your frame is assembled.

Step 1: Spread tent out flat, floor side down. Unzip doors

Step 2: Locate the fiberglass tent poles. Extend each pole by inserting each section into the metal ferrules. You will have six fiberglass poles. The two longest poles (A) are the main room tent poles. The next two longest poles (B) will be used at each side of the main room. The two shortest fiberglass poles (C) are the side room poles.



Step 3: While making sure sleeves are in line with each other, slide the two longest fiberglass poles (A) through the sleeves that are opposite each other on the roof of the tent. Slide the next two longest poles (B) through the sleeves that are on either side of the main tent room.

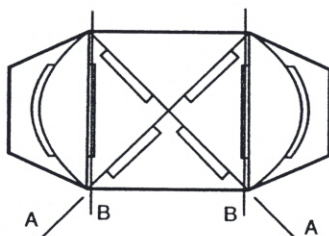


Straighten the sleeves along the fiberglass sections. Position the main tent poles so that they cross at the center of the tent as shown and that the two side poles cross over the main tent poles.

Step 4: Starting at the back corners of the tent, and making sure that the tent poles follow the seams of the tent, insert pins located at the floor edge of the tent into the ferrules at the ends of the main fiberglass tent poles. You will find two sets the pins attached to the rings at the base of the tent. One set is for the main tent pole and the other will be used for the side room poles.



 
Step 5: One person should now go into the front door of the tent and gently lift the roof of the tent and the two center poles up off the ground. The other person should carefully flex one of the main room fiberglass poles and insert the pin located at the front base of the tent into the end of the fiberglass pole. Then repeat the same step with the remaining main room pole.

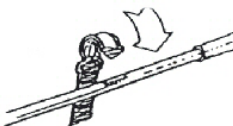

Step 6: With a person on each end of the side poles, flex poles and place end of the poles over the single pins at the base of the tent near us the front door and under the rear tent window. Clip tent to frame.

Step 7: Stake down tent by inserting stakes through the plastic rings and the webbing stake loops at the base of the tent. Hammer stakes into ground at a 45-degree angle by using a hammer or mallet, making sure to pull tent out even and tight.

 
Step 8: To assemble the side rooms, locate the remaining fiberglass poles (Key C) and insert one through each sleeve over the side rooms. With a person on each end of the pole, flex the fiberglass and insert the remaining pins at the base of the tent into the ferrules at the ends of the side room poles. Clip tent to frame.

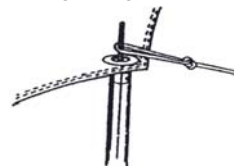

Step 9: To raise the canopy, take the two steel canopy poles and place the pointed end of one of the poles into the grommets at one corner of the canopy. Tie a guy rope to the point of the canopy pole and pull rolled out at 45-degree angle to the tent and stake down. Repeat same step with the remaining canopy pole. Tent should appear as shown:



 Step 10: Unfold fly and place over tent. Attach the hooks on the fly to the loops sewn to the tent walls. Fasten the Velcro fasteners at each corner of the fly to the fiberglass frame. Tent should appear as shown:



Your tent comes with two divider curtains, which can be attached to the inside tent wall to divide tent into separate rooms for privacy. There is also a mud mat for your convenience and help keep your tent floor clean. Stake down the mud mat with the pin stakes being inserted into the grommets at the edge of the mat and stake to the ground.

Note: To take down tent, follow steps above and the reverse order. Be sure to leave doors and windows unzipped. Place stakes into stake bag and poles into pole bag, which are provided.

The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay it on top of tent. Start a small tight roll, the width of your carry bag, with the pole bag placed at the end opposite the door. Roll tent toward door to allow air to escape. Once rolled, secure with straps. Slide tent and stake bag into carry bag. Make sure tent is clean and dry before storing. To prolong the life of the tent floor, always select a level, clean area for the campsite. Store in a dry area off of concrete floor.



Assembly Instructions

Warning!

Keep all flame and heat sources away from this tent fabric.

This tent is made with flame resistant fabric, which meets CPAI-84 specifications. **It is not fireproof.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render flame-resistance properties ineffective.

Danger:

Stoves, lanterns, candles, grills, heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in this tent. Use of such devices in this tent will cause asphyxiation, carbon monoxide poisoning, and death or serious and permanent injuries. For this reason:

DO NOT ...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.

Do ...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

Do not leave your tent set up in direct sunlight longer than necessary.

The sun's ultraviolet (UV) light degrades almost every fabric and material. If left in sunlight for prolonged periods of time, fabric will fade and weaken. UV damages not covered by the manufacturers warranty. Do not store tent on concrete floor.

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to ridged specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the frame to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.

Send your request for parts to:

American Recreation Products, Inc.
1224 Fern Ridge Parkway
St. Louis, MO 63141-4451

 


Maker of the Genuine Swiss Army Knife

Replacement Parts

If you have questions or need to order a part, call 888 797-2769
Have your model number and part number ready when you call.

Do not order by reference Key number

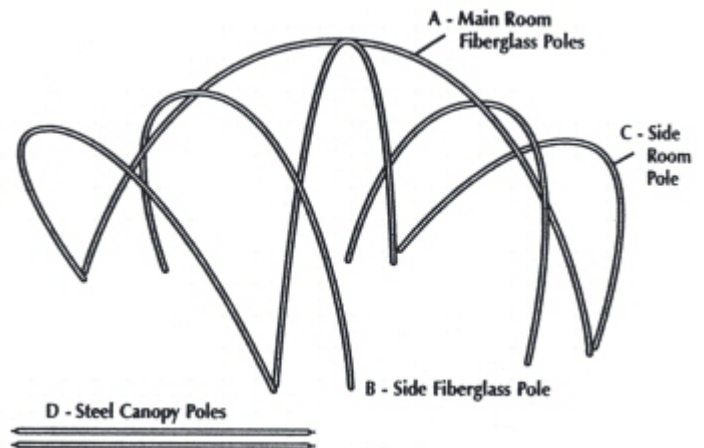

Key Number	Model No. WG31203		Qty. Req.
	Description	Part Number	
A	Main room fiberglass pole	95-0014	2
B	Side fiberglass pole	01-0023	2
C	Side room pole	02-0075	2
D	Steel canopy poles	02-0076B	2
	Complete frame	WG31203FR	1
	Replacement fly	WG31203FLY	1
	Divider curtain	WG31203DC	2
	Mud mat	WG31203MAT	1
	Plastic stakes	7.5 Stake-WG	14
	Metal stakes	Pin Stake	4
	Guy ropes	A1001-WG	4

If you have any questions you may also visit our website at: www.camping-n-gear.com