

# MODEL 36189 - MT. VIEW

## ASSEMBLY INSTRUCTIONS

 
**IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE SCREEN HOUSE ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY. IT IS RECOMMENDED TO HAVE TWO PEOPLE BE INVOLVED IN SETUP.**

**NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.**


**NOTE:** Choose a level surface to set up your screen house.

**STEP 1:** Separate the frame poles by number. Refer to the frame drawing on the back of this page to see how your frame is assembled.

**STEP 2:** Locate the frame pole labeled #1 and the two plastic roof joints. Insert the frame pole into the single opening of each of the plastic roof joints.

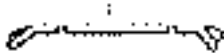

**STEP 3:** Locate the four poles labeled #2 and four poles labeled #3. Join one each #2 and #3 poles together to form 4 straight poles. Insert one end of each of the poles into the open ends of the plastic roof joints.

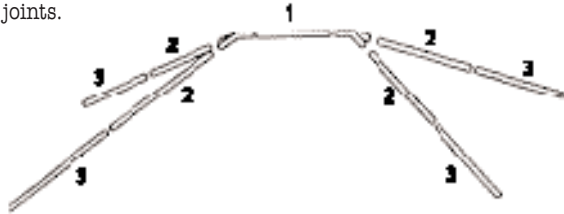

**STEP 4:** The next step is to locate the eight poles labeled #7, the four poles labeled #8, and the two poles labeled #11 and the four plastic corner joints. Join the poles together, as shown below, to form 4 straight ridge poles. Using the four plastic corner joints, assemble frame as shown to form framing for the roof of your screen house.




**STEP 5:** Find the four poles labeled #4 and insert one end of each pole into the open, bottom end of the plastic corner joint.

**STEP 6:** With the help of another person, place the screen house over the frame. Stretch screen house over each plastic corner joint.




**STEP 7:** Attach the bottom sections of the upright poles, labeled #6, into the open end of the corner uprights. The drilled holes should be closest to the ground for the screen house attachment.

**STEP 8:** Attach the screen house to the pole by inserting the hooks on the screen house into the drilled holes, adjusting screen house as desired.

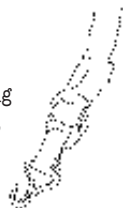


**STEP 9:** Go into the screen house and wrap the Velcro fasteners at the roof of the screen house around the screen house frame.

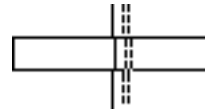

**STEP 10:** Stake screen house down by inserting stakes through the loops at each of the screen house corners and hammer stakes into the ground at a 45° angle, by using a hammer or mallet.

Screen house should appear as shown.

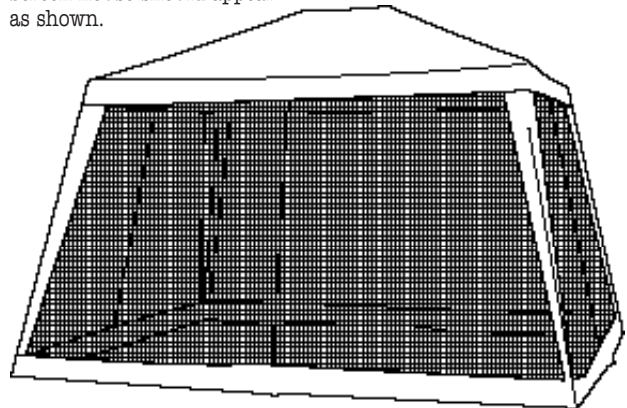

**NOTE:** Four plastic feet are included with your screen house, which can be attached to the bottom of each of the side upright poles. This will allow you to use your screen house on a wood deck or in the sand.

There are also four guy ropes and extra stakes included for added stability. Attach one end of the guy rope to the loops on the screen house corners. Make a loop at the opposite end of the guy rope and place loop over the stake. Stake to the ground, adjusting guy rope to make it taut.

To take down your screen house, follow steps above in the reverse order. Place stakes into stake bag and poles into carry bag, which are provided. Fold the screen house into thirds and start a small, tight roll. Once rolled, tie a string or rope around the screen house to hold in place and slide into the carry bag. Make sure screen house is clean and dry before storing.

# SAFETY AND CARE WARNING!

**KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS SCREEN HOUSE FABRIC. This screen house is made with flame resistant fabric which meets CPAI-84 specifications. IT IS NOT FIREPROOF. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.**

## DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Never use fuel burning, oxygen consuming devices (i.e. heaters, lanterns, cooking stoves or other flame sources) inside your tent.

## DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

**DO NOT LEAVE YOUR SCREEN HOUSE SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. UV DAMAGE IS NOT COVERED BY THE MANUFACTURER'S WARRANTY. DO NOT STORE ON CONCRETE FLOOR.**

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.



## REPLACEMENT PARTS


If you have questions or need to order to a part, call **1-800-325-8368** or log into our website at [www.wenzel.com](http://www.wenzel.com). Have your model number and part number ready when you call. **DO NOT ORDER BY REFERENCE KEY NUMBER.**

Send your request for parts to:

**American Recreation Products, Inc.**

1224 Fern Ridge Parkway  
St. Louis, MO 63141-4451

### MODEL NO. 36189

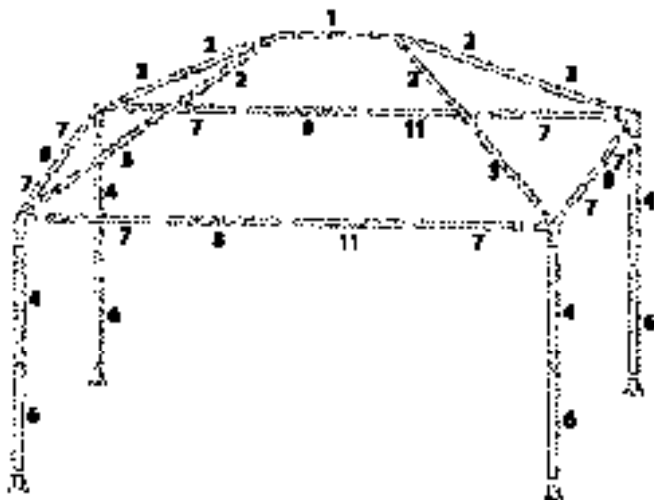

#1		1 pcs
#2		4 pcs
#6		4 pcs
#4		4 pcs
#8		4 pcs
#7		4 pcs
#9		4 pcs
#11		2 pcs



2 pcs



4 pcs



4 pcs



8 pcs

Complete Frame 74036FR  
Center Hub 74036HUB  
Corner Joint 74036JOINT  
Plastic Feet 74036FEET  
Stakes PIN STAKE