


MODEL 36190 - ONTARIO

ASSEMBLY INSTRUCTIONS

IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE SCREEN HOUSE ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY OF THE SCREEN HOUSE. IT IS RECOMMENDED TWO PEOPLE BE INVOLVED IN SETTING UP THIS SCREEN HOUSE.

NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.


STEP 1: Spread screen house out flat with frame pole sleeves on top.

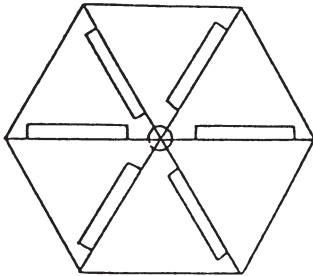


STEP 2: Extend the fiberglass frame poles by pulling out each section and placing it into the metal ferrules. You will have three fiberglass poles (A). These will be used for the ridge poles of your screen house.



STEP 3: While leaving screen house flat on the ground, insert one of the fiberglass ridge poles through the sleeves that are opposite each other on the screen house roof. Repeat with the other two ridge poles. Straighten the sleeves along the fiberglass poles. The poles should cross at the top of the screen house.

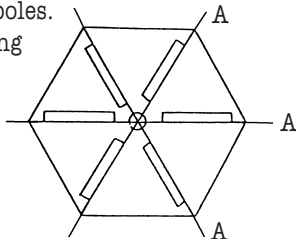

STEP 4: Attach the metal hooks on each of the screen house corners to the holes in each of the plastic elbow joints. Flexing the fiberglass will be necessary.

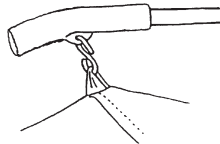

STEP 5: Locate the screen house fly and attach to the loops on the screen house roof.




STEP 6: Extend the chaincorded steel poles. There will be a total of six poles. Insert one of the steel poles into the open end of the plastic elbow joints. Repeat with the remaining 5 poles.

STEP 7: With a person on opposite sides of the screen house, push up on the screen house frame, raising two poles at the same time. Continue until all poles are raised.

Insert opened end of each side upright over the pin located at each of the six corners of the screen house.


Adjust frame until screen house is in upright position. Clip screen house to frame.

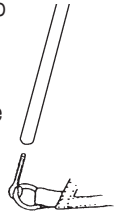

STEP 8: Insert stakes through the metal rings located at each corner of the screen house. Stake down by hammering each stake into the ground at a 45° angle, using a hammer or mallet.

NOTE: Make sure flaps located at bottom edge of screen house are on the inside before staking down.

Screen house should appear as shown.

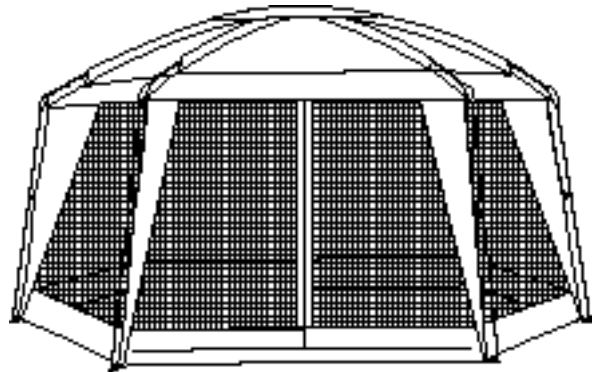

NOTE: To take down screen house, follow steps above in the reverse order. Place stakes into stake bag and poles into carry bag, which are provided. The screen house should be folded into equal parts to distribute the bulk. Start a small tight roll, the width of the carry bag and roll away from tent roof, to allow the air to escape. Once rolled, tie a string or rope around screen house to hold into place. Slide screen house, and stakes into carry bag. Make sure screen house is clean and dry before storing.

SAFETY AND CARE WARNING!

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS SCREEN HOUSE FABRIC. This screen house is made with flame resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIRE-PROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Never use fuel burning, oxygen consuming devices (i.e. heaters, lanterns, cooking stoves or other flame sources) inside your tent.

DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

DO NOT LEAVE YOUR SCREEN HOUSE SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. UV DAMAGE IS NOT COVERED UNDER MANUFACTURER'S WARRANTY. DO NOT STORE ON CONCRETE FLOOR.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.




REPLACEMENT PARTS

If you have questions or need to order a part, call 1-800-325-TENT or log into our website at www.wenzelco.com. Have your model number and part number ready when you call. **DO NOT ORDER BY REFERENCE KEY NUMBER.**

Send your request for parts to:

American Recreation Products, Inc.
1224 Fern Ridge Parkway
St. Louis, MO 63141-4451

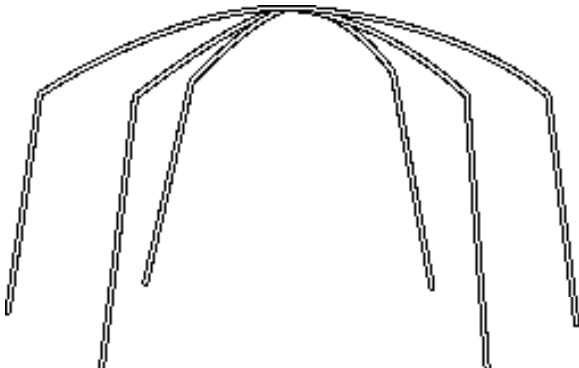

KEY NO.	MODEL NO. 36190, 15' x 13'		QTY. REQ
	DESCRIPTION	PART NO.	
A	Fiberglass Pole	04-0080	3
B	Steel Uprights	98-0062B	6
	Replacement Fly	36190FLY	1
	Complete Frame	36190FR	1
	Stakes	7.5 STAKE	6