

MODEL 36191 - SAVANNAH

ASSEMBLY INSTRUCTIONS

IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY OF THE TENT. FOR THIS MODEL, IT IS RECOMMENDED TWO PEOPLE BE INVOLVED IN THE SET UP.

PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.

NOTE: To prolong the life of the tent floor, select a level, clean area for the campsite. To prevent damage to the zipper, unzip the doors, prior to tent set-up, to allow air to enter the tent. To improve the weather resistance of your tent, it is advisable to use seam sealer to coat all exposed seams. You should apply only to the underside of the fly and inside seams of the tent. If applied to the outside of seams, discoloration of your tent may occur. Seam sealer is available in the camping section of your local sporting goods store. For your convenience and improved tent functionality, we have developed a self-contained storm flap pocket. Simply unzip the storm flaps covering the windows and doors and drop into the pocket that has been formed between the bottom of the storm flap and the mesh window.

WARNING: During assembly of the main room tent poles (Step 5), the tent poles are in tension. If the poles are not held firmly in place by adults during assembly, the tension in the poles may cause them to break or one end of the pole to flip up, which could cause serious injury to you or others involved in assembling the tent. To avoid this hazard:

 
- **DO HAVE** two adults involved in assembling the tent;
- **DO HAVE** one adult hold the end of the tent pole in place over the pin at the rear of the tent, while the second adult gently raises the roof of the tent and the crossed tent poles. When the tent and poles are raised, the first adult who is at the rear of the tent, goes to the front of the tent and completes the pole connection at the front of the tent.

Failure to follow this warning could cause serious injury to you or others involved in assembling this tent.

STEP 1: Spread tent out flat, floor side down. Unzip doors.




STEP 2: Please look at the replacement parts diagram to see how your frame is assembled. Extend fiberglass frame poles by pulling out each section and placing into the metal ferrules. You will have seven fiberglass poles. The three longest pole sections (A) are the main tent poles. The next longest pole with bullet point end tips (B) is the front tent pole. The next longest pole with a ferrule on each end (C) is the fiberglass ridge pole for the screen room and the two remaining, shortest poles (D) are the side room ridge poles.

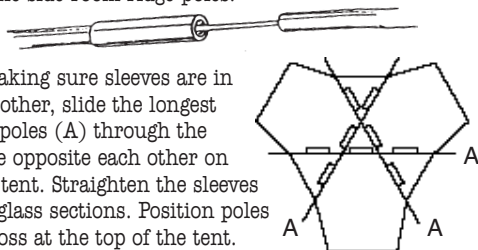


STEP 3: While making sure sleeves are in line with each other, slide the longest fiberglass tent poles (A) through the sleeves that are opposite each other on the roof of the tent. Straighten the sleeves along the fiberglass sections. Position poles so that they cross at the top of the tent.

STEP 4: Starting at the back of the tent, insert pins located at tent floor into the ferrules at the ends of the fiberglass poles. You will notice that there are two pins attached to the O-rings at the base of the tent, one pin is for the main tent pole and the other will be used for the side room pole.

 STEP 5: (Please read and follow the IMPORTANT SAFETY WARNING that appears before Step 1). While one adult holds the end of the tent pole firmly in place over the pin at the rear of the tent, the other adult should now go into the front door of the tent and gently lift the roof of the tent and the crossed tent poles up off the ground. When the tent and poles are raised, the first adult who is at the rear of the tent, goes to the front of the tent, flexes the fiberglass pole and places the ferrule at the end of the main tent pole over the pin at the base of the tent. Repeat step for the other two main tent poles. Clip plastic hooks to the fiberglass frame poles.

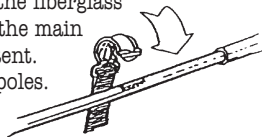

 STEP 6: Locate the front fiberglass tent pole. This pole has metal bullet point end tips. Insert one end of the pole through the sleeve at the front roof of the tent, where the screen porch meets the front wall of the tent. With a person on either end of the pole, flex the fiberglass and place the metal end tips into the grommets on the tent sleeves, on either side of the screen porch.

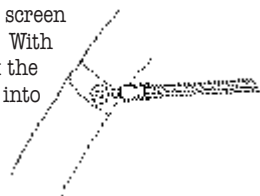


STEP 7: Stake down tent by inserting the stakes through the stake loops at the floor edge of the main tent room. Hammer stakes into ground at a 45° angle by using a hammer or mallet, making sure to pull tent out even and tight.

STEP 8: Next locate the two fiberglass side room poles (D). These are the shortest two fiberglass poles and have a ferrule on each end. Slide one of the poles through each of the sleeves on the top of the side room. Center the pole in the sleeve.

STEP 9: Locate the remaining fiberglass pole (C) and slide it through the sleeve at the top front of the screen room. Center the pole in the sleeve.

STEP 10: Locate the 6 steel upright poles and extend the wire-corded sections into 6 separate poles. The four shorter steel poles will be used as the side room uprights and the two longer steel poles will be used as the screen porch uprights.

 STEP 11: With one person taking one of each of the side uprights poles, insert the free end of the fiberglass side room ridge pole in the bent end of the steel side upright pole. Flex the fiberglass and place the open ends of the side upright poles over the remaining pins at the base of the tent.

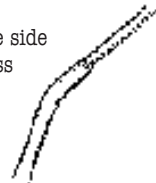


STEP 12: Repeat this step with the remaining two steel side uprights poles and the opposite side room.

STEP 13: Now take your remaining two steel poles and following the same procedure as explained in step 11, raise the front screen porch. Place the open ends of the screen room upright poles over the remaining pin at the base of the tent, on either side of the screen room.

STEP 14: Continue to stake down the tent by inserting tent stakes through the loops at the corners of the tent, pulling the tent floor out tightly and evenly. Hammer stakes into the ground at a 45° angle by using a hammer or mallet.

 
Tent should appear as shown.

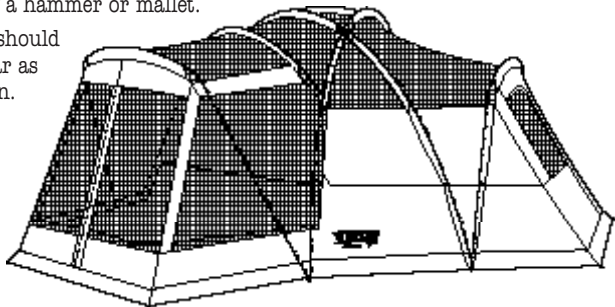


STEP 15: Unfold fly and stretch out all corners. Place the fly over the tent, making certain the front of the fly fits over the front tent pole and the covering for the side rooms extend over each room. Attach hooks on fly to the plastic "D" rings attached to the metal rings at the bottom of the tent.



 STEP 16: Fasten the self-fasteners at each corner of the fly to the fiberglass frame.

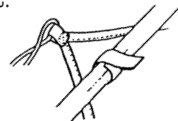

 STEP 17: Guy ropes are included for the fly. Tie the guy ropes through loops on the fly. Make a loop at the opposite end of the guy rope by using slider and place loop over tent stake. Adjust slider to make guy rope tight and stake to the ground. Extra tent stakes have been included for this.

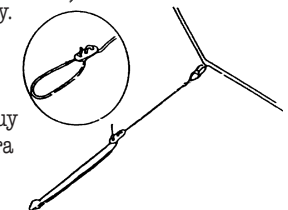

Tent should appear as shown.



Divider curtains are included to divide your tent into separate rooms for privacy.

NOTE: To take down tent, follow the above steps in the reverse order. Be sure to leave doors unzipped. Place stakes into stake bag and poles into pole bag, which are provided.

The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay on top of tent. Start a small tight roll, the width of your carry bag. Roll tent toward door to allow air to escape. Once rolled, secure with straps. Place tent, frame and stakes into the carry bag, close with the drawstrings and cinch with the compression strap. Make sure tent is clean and dry before storing.

SAFETY AND CARE WARNING!

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent is made with flame resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIREPROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

▲ DANGER:

Stoves, lanterns, candles, grills, heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in this tent. Use of such devices in this tent will cause asphyxiation, carbon monoxide poisoning, and death or serious and permanent injuries. For this reason:

- DO NOT use fuel-burning devices inside or near this tent.
- Your failure to follow this warning will cause death or serious and permanent injury to you or others using this tent.

DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.

DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

 
DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. UV DAMAGE IS NOT COVERED BY THE MANUFACTURER'S WARRANTY. DO NOT STORE TENT ON CONCRETE FLOOR.

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.



REPLACEMENT PARTS

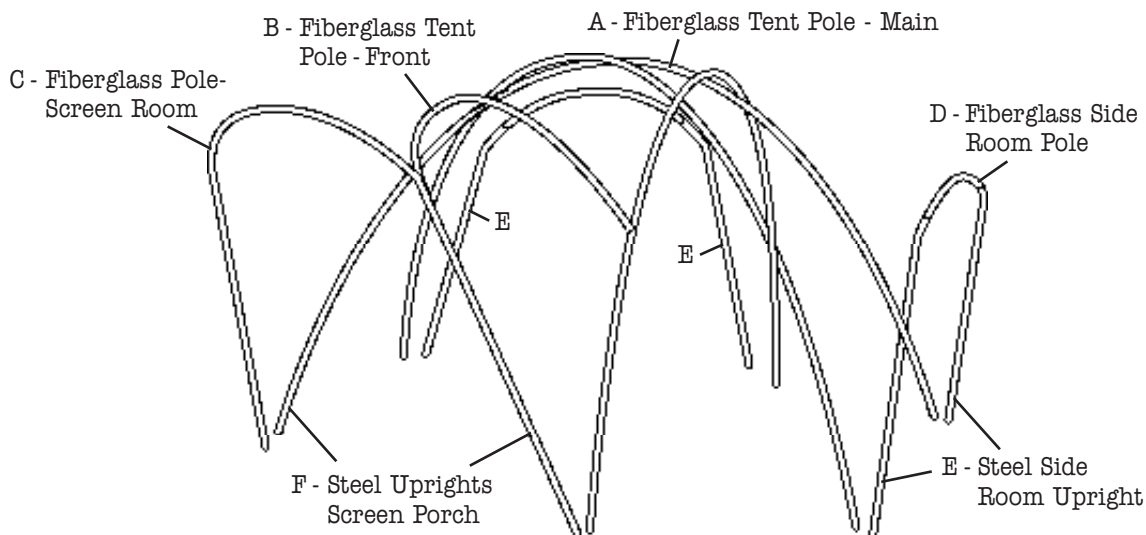

If you have questions or need to order to a part, call 1-800-325-TENT or log into our website at www.wenzelco.com. Please have your model number and part number available.

DO NOT ORDER BY REFERENCE KEY NUMBER.

Send your request for parts to:

American Recreation Products, Inc.
1224 Fern Ridge Parkway
St. Louis, MO 63141-4451

KEY NO.	MODEL NO. 36191, 18' x 16'5"		QTY. REQ
	DESCRIPTION	PART NO.	
A	Fiberglass Tent Pole - Main	04-0082	3
B	Fiberglass Tent Pole - Front	04-0076	1
C	Fiberglass Pole - Screen Room	04-0035	1
D	Fiberglass Pole - Side Room	00-0035	2
E	Steel Uprights - Side Room	04-0078BS	4
F	Steel Uprights - Screen Room	04-0079BS	2
	Complete Frame	SG33017FR	1
	Replacement Fly	36191FLY	1
	Stakes - Large	7.5 STAKE	19
	Guy Ropes	A1001	4
	Divider Curtain	36191DC	2