

Model 36144 – Shasta


Assembly Instructions

Important: We advise you to assemble the tent once before you go camping to become familiar with the assembly of the tent. For this model, it is recommended that two people be involved with the set up operation. Please look at the replacement parts diagram to see how your frame is assembled.

- To prolong the life of the tent floor, select a level, clean area for the campsite.
- To prevent damage to the zipper, unzip the door, prior to tent set-up, to allow air to enter the tent.
- To improve the weather resistance of your tent, it is advisable to use seam sealer to coat all exposed seams. You should apply only to the underside of the fly and inside seams of the tent. If applied to the outside of seams, discoloration of your tent may occur. Seam sealer is available at the camping section of any local sporting goods store.
- For your convenience and improved tent functionality, we have developed a self-contained storm flap pocket. Simply unzip the storm flaps covering the windows and door and drop into the pocket that has been formed between the bottom of the storm flap and the mesh window.

Note: Please look at the replacement parts diagram to see how your frame is assembled


Step 1: Spread tent out flat, floor side down.

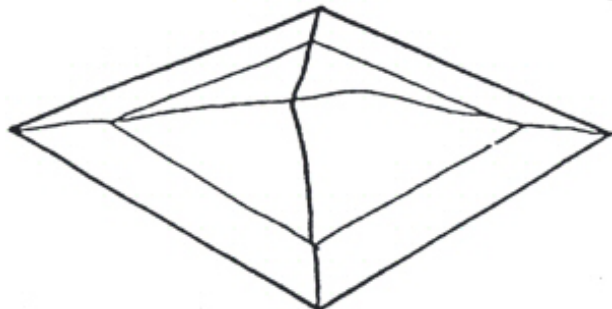

Step 2: Extend fiberglass frame sections by pulling out each section and placing it into the metal ferrules.



Step 3: While making sure sleeves are in line with each other, slide each fiberglass frame poles to the sleeves that are opposite each other on the sides and roof of the tent. Straighten the sleeves along the fiberglass sections. Position poles so that they form an "X" across the tent.

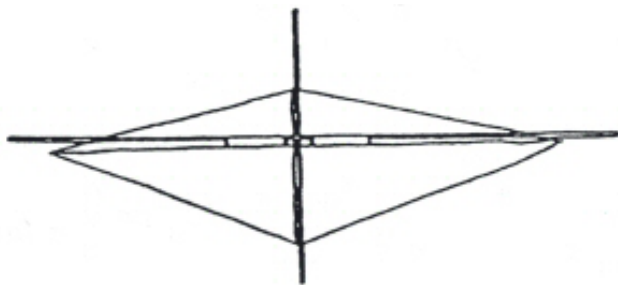

Step 4: Starting at the back corners of the tent, place ends of the fiberglass frame poles into the pole pockets located at each corner of the tent. To raise tent, repeat the same procedure at the front corners. Flex the fiberglass pole into an upward position, warning to Arches.



Note: As poles are raised, make sure metal ferrules do not catch on the sleeves. It may be necessary to hold the corner of the tent and place.

Step 5: Tie a tent to frame at center roof to the two poles cross.

Step 6: Stake down tent by inserting the tent stake through the loop at each corner of the tent, hammering into ground by using a hammer or mallet. Make sure to pull tent out even and tight.



Step 7: Place fly over tent. Attach hooks on the fly to loops on the tent sleeves.

Tent should appear as shown



Note: To take down your gazebo, follow steps above in the reverse order. Place stakes into stake bag and poles into carry bag, which are provided. Fold the gazebo into thirds and start a small, tight roll. Once rolled, tie string or rope around the gazebo to hold in place and slide into the carry bag. Make sure gazebo is clean and dry before storing.

Safety And Care Instructions

Warning!

Keep all flame and heat sources away from this tent fabric! This tent is made with flame resistant fabric, which meets CPAI-84 specifications. **It is not fireproof.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

Danger:

Stoves, lanterns candles, grills heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in this tent. Use of such devices in this tent will cause asphyxiation, carbon monoxide poisoning, and death or serious permanent injuries. For this reason:

- DO NOT use fuel burning devices inside or near this tent
- Your failure to follow this warning will cause death or serious and permanent injury to you or others using this tent.

DO NOT ...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended
3. Do not leave children unattended inside a tent
4. Do not use heating, lighting or cooking equipment with open flames in or near tents
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.

Do ...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

Do not leave your tent set up in direct sunlight longer than necessary.

The sun's ultraviolet (UV) light degrades almost every fabric and material. If left in the sunlight for prolonged periods of time, fabric will fade and weaken. **Do not store tent on concrete floor.**

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.




Replacement Parts

If you have any questions or need to order a part, call 1-800-325-8368 or log into our website at www.camping-n-gear.com Please have your model number and part number available.

DO NOT ORDER BY REFERENCE KEY NUMBER

Send your request for parts to: **The Wenzel Company**
113 Industrial Drive
New Haven, MO 63068

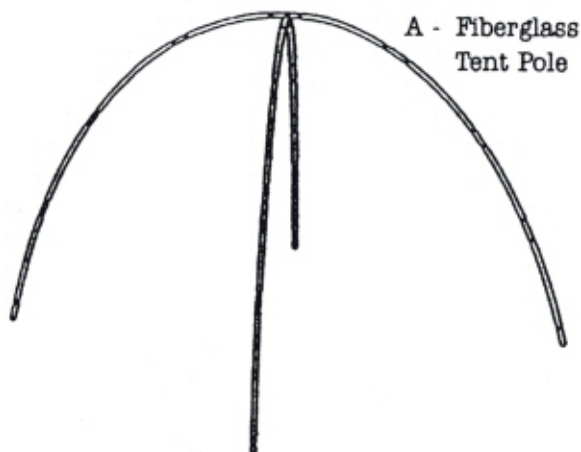

| Key # | Model No. 36144 | | Qty. Req. |
|-------|-----------------------|-------------|-----------|
| | Description | Part Number | |
| A | Fiberglass frame pole | 03-0082 | 2 |
| | Complete frame | 36144FR | 1 |
| | Replacement fly | 36144FLY | 1 |
| | Stakes | Pin Stake | 4 |