

Model 36157 – SHENANDOAH

Assembly Instructions

Important: We advise you to assemble the tent once before you go camping to become familiar with the assembly of the tent. For this model, it is recommended that two people be involved with the set up operation.

Please look at the replacement parts diagram to see how your frame is assembled.


Note: To prolong the life of the tent floor, select a level, clean area for the campsite. To prevent damage to the zipper, unzip the doors prior to tent setup, to allow air to enter the tent. To improve the weather resistance of your tent, it is advisable to use a seam sealer to coat all exposed seams. If applied to the outside of seams, discoloration of your tent may occur. Seam sealer is available at the camping section of your local sporting good store. For your convenience and improved tent functionality, we have developed a self-contained storm flap pocket. Simply unzip the storm flaps covering the windows and doors and drop into the pocket that has been formed between the bottom of the storm flap and the mesh window.

Step 1: Spread tent out flat, floor side down. Unzip the doors.


Step 2: Locate the fiberglass tent frame sections. You will have five (5) fiberglass poles. Two (2) of the longer pole sections (A) are for the center frame of the tent. The shorter pole sections (C) are to be used for the side rooms of the tent. The remaining pole (E) is for the screen room of your tent.

Step 3: While making sure sleeves are in line with each other, slide the two longest fiberglass tent poles through the sleeves that are opposite each other on the sides and roof of the tent. Straighten the sleeves along the fiberglass sections. Position poles so that they form an "X" across the tent.


Slide the shorter fiberglass tent poles (C) through the sleeves located at each end of the tent roof. Next, slide the screen room pole (E) through the sleeve located on the top of the screen room.

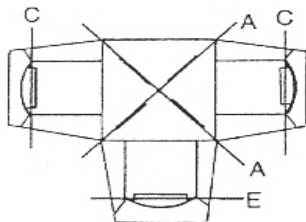

Step 4: Attach small hooks at each roof corner to the holes in each of the plastic elbow joints. Flexing the fiberglass will be necessary.

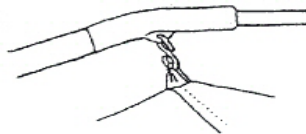


Step 5: Locate the four longer metal pole sections. (B). While leaving tent flat on the ground and not stakes down, join the end of one metal pole section to plastic elbow at end of each center fiberglass pole section. Raise the center room of the tent by placing the ends of the center metal pole sections over the pins located at the floor of the tent. Make certain the ends of the poles with a metal ring for the fly attachments are up. You can find the metal ring about 20" down from the top of the pole.

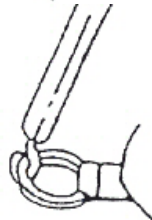


Step 6: Stake down tent by inserting tent stakes through metal ring and stakes loops at the floor of the tent, hammer stakes into ground at 45° angle by using a hammer or mallet. Make sure to pull tent out even and tight.

Step 7: Locate the remaining six metal pole sections (D) and join one end of each to the plastic elbows at ends of the side room and screen room fiberglass tent pole sections.


Step 8: Adjust pole sections until all walls are taut on the tent, and then adjust poles on the screen room until the walls are taut. The screen room poles should angle back to the tent and rest upon the ground as shown.

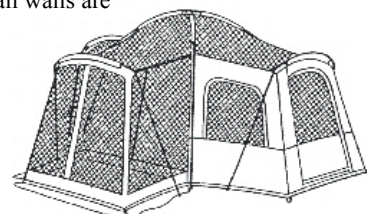


Step 9: With the help of another person, place fly over tent. Attach hooks on the fly into metal rings located on each end of the metal pole sections. Fasten the self-fasteners at each corner of the fly to fiberglass frame.

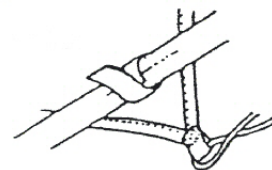

Step 10: There are guy loops located on the fly of the tent. Tie a guy rope at each of these loops. Make loop at opposite end of guy rope by using slider (as shown) and place loop over tent stake. Adjust slider to make guy rope tight. Extra tent stakes have been included for this.

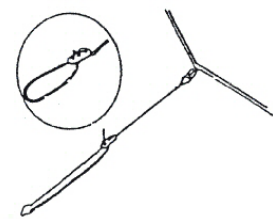

Note: The fly of your tent contains ClearView™ windows that are located over vents in your tent's roof. Tent should appear as shown.

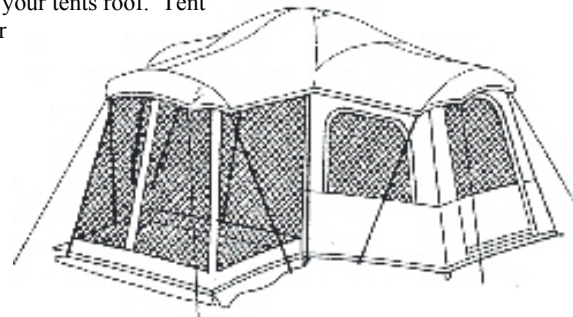

Your tent comes with a gear organizer that can be attached to loops on the inside of the tent ceiling to keep small items within easy reach and off the floor. Divider curtains are included to divide your tent into separate rooms for privacy. There is also a mud mat (removable floor), which can be used in the screen porch room and help keep your tent floor clean. Stake down the mat with the pin stakes being inserted into the grommets on the edge of the mat. We advise that you not use the mat during heavy rain, as it will hold water that can puddle and run into the inside floor of your tent.

Note: To take down tent, follow the above steps in the reverse order. Be sure to leave doors unzipped. Place stakes into stake bag and poles into pole bag, which are provided.

The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay it on top of tent. Start a small tight roll, the width of your carry bag, with the pole bag placed at the end opposite the door. Roll tent toward door to allow air to escape. Once rolled, tie string around tent and slide into carry bag.

Safety And Care Instructions

Warning!

Keep all flame and heat sources away from this tent fabric! This tent is made with flame resistant fabric, which meets CPAI-84 specifications. **It is not fireproof.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

Danger:

Stoves, lanterns candles, grills heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in this tent. Use of such devices in this tent will cause asphyxiation, carbon monoxide poisoning, and death or serious permanent injuries. For this reason:

- DO NOT use fuel burning devices inside or near this tent
- Your failure to follow this warning will cause death or serious and permanent injury to you or others using this tent.

DO NOT ...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended
3. Do not leave children unattended inside a tent
4. Do not use heating, lighting or cooking equipment with open flames in or near tents
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.

Do ...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

Do not leave your tent set up in direct sunlight longer than necessary.

The sun's ultraviolet (UV) light degrades almost every fabric and material. If left in the sunlight for prolonged periods of time, fabric will fade and weaken. **Do not store tent on concrete floor.**

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to ridged specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.




Replacement Parts

If you have an questions or need to order a part, call 1-800-325-8368 or log into our website at www.camping-n-gear.com Please have your model number and part number available.

Send your request for parts to: **The Wenzel Company**
113 Industrial Drive
New Haven, MO 63068

DO NOT ORDER BY REFERENCE KEY NUMBER

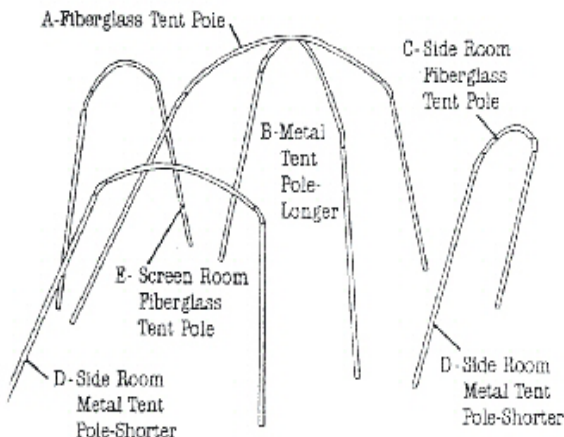

Key Number	Model No. 36157		Qty. Req.
	Description	Part Number	
A	Fiberglass tent pole	03-0034	2
B	Metal Pole Longer	00-0004	4
C	Side room fiberglass tent pole	03-0036	2
D	Side room & screen room metal tent pole shorter	00-0005	6
E	Screen room fiberglass pole	03-0035	1
	Complete frame	36157FR	1
	Replacement fly	36157FLY	1
	Gear organizer	36157GO	1
	Mud mat	36157MAT	1
	Divider curtain	36157DC	2
	Plastic stakes	7.5 STAKE	23
	Metal stakes	PIN STAKE	2