

Model 36163 – Solstice II

 
Assembly Instructions

Important: We advise you to assemble the tent once before you go camping to become familiar with the assembly of the tent. For this model, it is recommended that two people be involved with the set up operation. Please look at the replacement parts diagram to see how your frame is assembled.


Note: Choose a level surface the set up your screen gazebo.

Step 1: Extend each of the chain corded poles and separate the frame poles by color code. Referred to the frame dry none the back of this page to see how your frame is assembled.


Step 2: Locate the plastic center hub and the six poles color-coded blue. These six poles are the roof poles and having straight and on one end of the pole and the plastic corner joint attached to the opposite end. Insert the straight end of each roof pole into the open ends of the center hub. Make certain the clips on the tent poles snapped into the open ends of the plastic hub.




Step 3: The next step is to locate the 12 poles, which are color-coded yellow. Insert the ends of the old poles into the plastic corner joint at the ends of the roof poles, as shown.

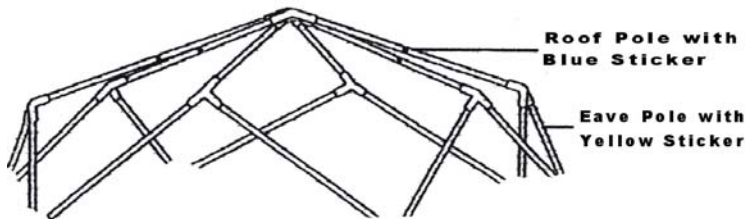

Step 4: Locate the remaining six side uprights, which are color-coded red. The uprights also consistent poles with openings on one end and the plastic corner joint attached to the upper end. With the plastic corner joints at the top, insert the ends of the eave poles into the corner joints at the side uprights. The straight, open ends of the side uprights should rest upon the ground.

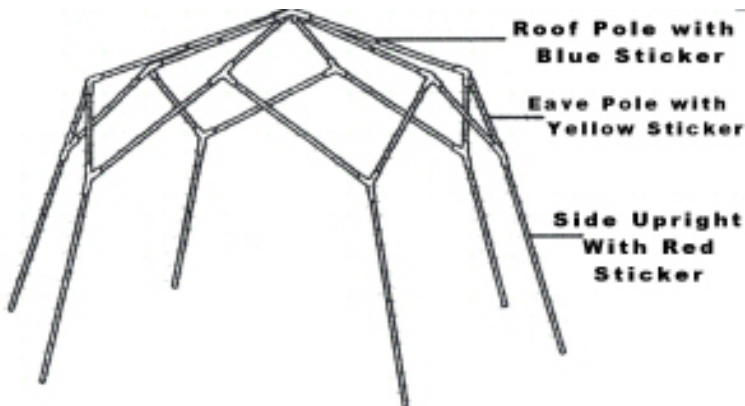

Step 5: With the help of another person, place the screen gazebo over the frame. Stretch the screen gazebo over the corner joints.

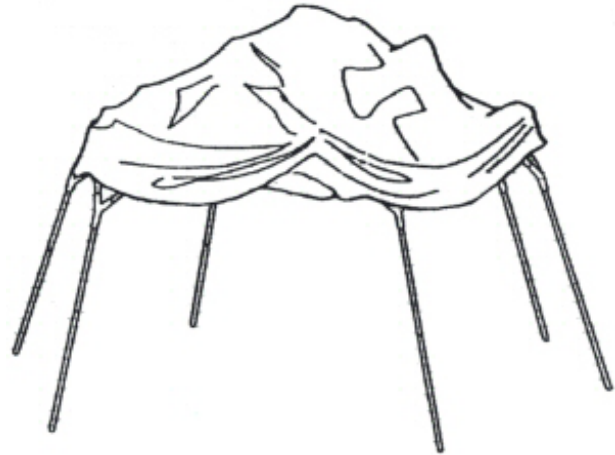


Step 6: One person should now enter the screen gazebo and tie the gazebo to the frame with the fabric ties, which are sewn to the inside of the screen gazebo.

Step 7: Attach the screen gazebo to the side uprights by placing the open ends of the uprights over the metal pins at the base of the screen gazebo. Repeat this step for the remaining five uprights poles.



Step 8: Stake screen gazebo down by inserting stakes through the stake loops at each corner of the screen gazebo. Stake down by hammering each stake into the ground at a 45-degree angle, using a hammer or mallet. Make sure the flaps (sod cloth), located at the bottom edge of the screen gazebo are on the inside before staking down.

Screen gazebo should appear as shown:

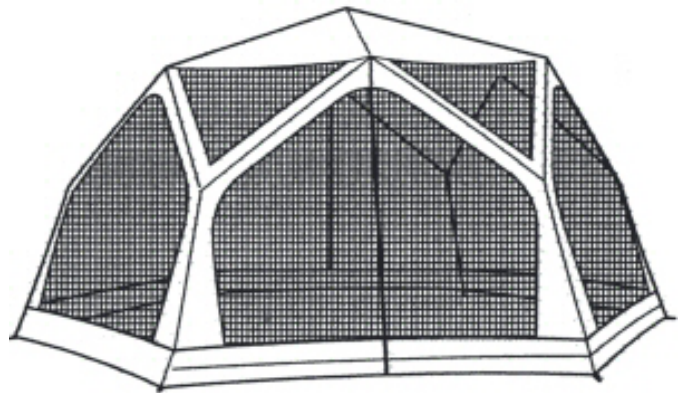

Note: To take down your screen gazebo, follow steps about and the reverse order. Place stakes into stake bag and poles into carry bag, which are provided. Fold the screen gazebo into thirds and start a small, tight roll. Once rolled, tie string or rope around the screen gazebo to hold in place and slide into the carry bag. Make sure screen gazebo is clean and dry before storing. Never store on concrete floor.

Safety And Care Instructions

Warning!

Keep all flame and heat sources away from this tent fabric! This tent is made with flame resistant fabric, which meets CPAI-84 specifications. **It is not fireproof.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

Danger:

Stoves, lanterns candles, grills heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in this tent. Use of such devices in this tent will cause asphyxiation, carbon monoxide poisoning, and death or serious permanent injuries. For this reason:

- DO NOT use fuel burning devices inside or near this tent
- Your failure to follow this warning will cause death or serious and permanent injury to you or others using this tent.

DO NOT ...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended
3. Do not leave children unattended inside a tent
4. Do not use heating, lighting or cooking equipment with open flames in or near tents
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.

Do ...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

Do not leave your tent set up in direct sunlight longer than necessary.

The sun's ultraviolet (UV) light degrades almost every fabric and material. If left in the sunlight for prolonged periods of time, fabric will fade and weaken. **Do not store tent on concrete floor.**

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.




Replacement Parts

If you have any questions or need to order a part, call 1-800-325-8368 or log into our website at www.camping-n-gear.com Please have your model number and part number available.

DO NOT ORDER BY REFERENCE KEY NUMBER

Send your request for parts to: **The Wenzel Company**
113 Industrial Drive
New Haven, MO 63068

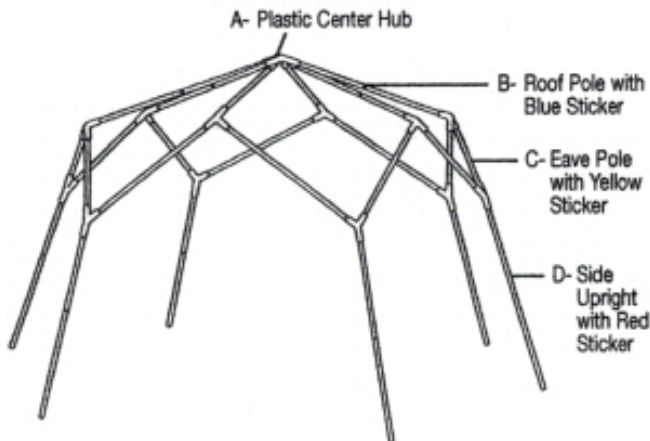

Key Number	Model No. 36163		Qty. Req.
	Description	Part Number	
A	Plastic center hub	03-0057	1
B	Roof pole with blue sticker	03-0061B	6
C	Eave pole with yellow sticker	03-0062B	12
D	Side upright poles with red sticker	03-0063B	6
	Complete frame	36163FR	1
	Stakes	7.5 Stake	6