

MODEL 35999 - TRINIDAD

ASSEMBLY INSTRUCTIONS

IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE SCREEN HOUSE ONCE BEFORE USE TO BECOME FAMILIAR WITH THE ASSEMBLY. IT IS RECOMMENDED TWO PEOPLE BE INVOLVED IN SETUP.

NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.

 
STEP 1: Separate frame poles. Extend the frame pole sections which are chaincorded together.

STEP 2: Locate the three frame pole sections with the plastic joints attached on each end.

Place pole sections on the ground for joining together. The section with the orange plastic joints is the center ridge pole and should be placed in the middle

NOTE: Make sure the sides of the plastic joints which are marked with "E" are facing the center ridge pole.


STEP 3: Locate the four single poles. These are the side ridge poles. They have a clip lock on each end. Starting with one corner, insert one end into the plastic joint marked with "E" and the other end into the orange plastic joint. Make sure the clip locks on the poles snap into the slots on the plastic joints. Repeat this procedure for the remaining three corners. This will form the front and rear eave of the frame.

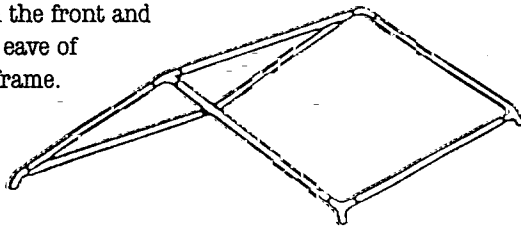

STEP 4: Locate the four upright sections. Starting in one corner, place the end of the pole section with the clip lock into the end of the plastic joint and snap into place.

Repeat this procedure for the remaining three corners.

 
Your screen house frame is now completely assembled and should be in standing position.

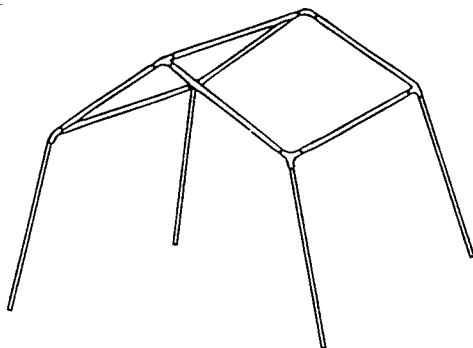

STEP 5: With the help of another person, place screen house over frame. Stretch screen house out tightly and attach the metal hook on each corner into the open end of each frame pole, doing opposite sides at the same time. Use buckles on the corners of the screen house to adjust the tension.

STEP 6: Stake down screen house by inserting a tent stake through the stake loops at each corner, and on each side of the screen house. Hammer stakes into ground at a 45° angle, by using a hammer or mallet. Make sure to pull out even and tight.

 STEP 7: Guy ropes are provided for extra stability. There are loops located on each corner of the screen house. Tie a guy rope to each loop. Make a loop at opposite end of guy rope by using slider and place loop over tent stake. Adjust slider to make guy rope tight. Screen house should appear as shown.

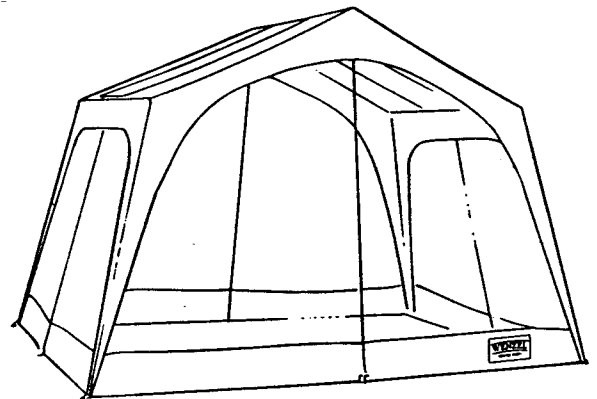

NOTE: For your convenience, the walls of your screen house can be unzipped and are completely removable.

NOTE: To take down screen house, follow steps above in the reverse order. Place stakes into stake bag which is provided.

To roll screen house up, fold into thirds length-wise. Start a small, tight roll with poles placed on top and roll toward the door. Once rolled, tie a string or rope around tent to hold into place. Make sure screen house is clean and dry before storing

SAFETY AND CARE WARNING!

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS SCREEN HOUSE FABRIC. This screen house is made with flame resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIRE-PROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Never use fuel burning, oxygen consuming devices (i.e. heaters, lanterns, cooking stoves or other flame sources) inside your tent.

DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

DO NOT LEAVE YOUR SCREEN HOUSE SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE TENT ON CONCRETE FLOOR.

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.



 
REPLACEMENT PARTS

If you have questions or need to order a part, call 1-800-325-TENT or log into our website at www.wenzelco.com. Please have your model number and part number ready when you call. **DO NOT ORDER BY REFERENCE KEY NUMBER.**

Send your request for parts to: **The Wenzel Company**

113 Industrial Drive

New Haven, MO 63068

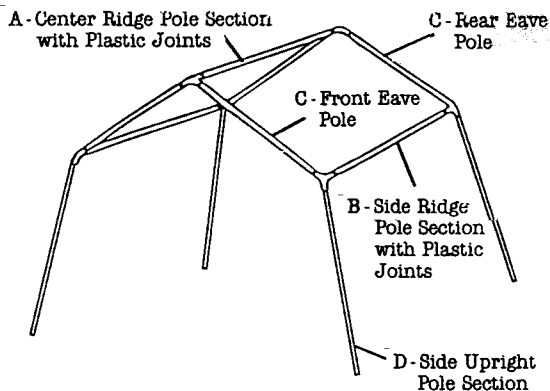

| KEY NO. | MODEL NO. 35999 | | QTY. REQ |
|---------|---|------------|----------|
| | DESCRIPTION | PART NO. | |
| A | Center ridge pole section with plastic joints | 99-0036W | 1 |
| B | Side ridge pole section with plastic joints | 99-0037W | 2 |
| C | Front and rear eave pole | 99-0038W | 4 |
| D | Side upright pole section | 99-0039W | 4 |
| | Complete Frame | 53593800WS | 1 |