

Model – WG31202

Assembly Instructions

Important: We advise you to assemble the tent once before going camping to become familiar with the assembly. It is recommended two people be involved in the set up operation

Note: To prolong the life of the tent floor, select a level, clean area for the campsite. To prevent damage to the zipper, unzip the doors, prior to tent set-up, to allow air to enter tent. To improve the weather resistance of your tent, it is advisable to use seam sealer to coat all exposed seams. You should apply only to the underside of the fly and inside seams of the tent. If applied to the outside seams, discoloration of your tent may occur. Seam sealer is available at the camping section of your local sporting good store. For your convenience and improved tent functionality, we have developed a self-contained storm flap pocket. Simply unzip the storm flaps covering the windows and doors and drop into the pocket that has been formed between the bottom of the storm flap and mesh the window.

 
Note: Please look at the replacement parts diagram to see how your frame is assembled.

Step 1: Spread tent out flat, floor side down. Unzip doors

Step 2: Locate the fiberglass tent poles. Extend each pole by inserting each section into the metal ferrules. You will have five fiberglass poles. The two longest poles (A) are the main tent poles. The next longest pole (B) will be used for the front tent pole. The shortest pole has metal end tips (D) and will be used with the tent fly. The remaining pole which has ferrules on each end (C) will be used for the rear tent room.



Step 3: While making sure sleeves are in line with each other, slide the two longest fiberglass poles (A) through the sleeves that are opposite each other on the roof of the tent. Straighten the sleeves along the fiberglass sections. Position poles so that they form an "X" across the tent.

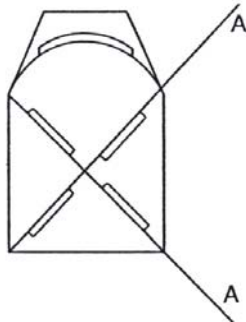


Step 4: With a person on each end of one of the main tent poles, gently flex the fiberglass into an arch and place the ferrules at the end of the tent pole over the pins at the front tent corner and at the base of the main tent room. Repeat this step with the other main tent pole. You will find two sets the pins attached to the rings at the base of the main tent room. One set is for the main tent pole and the other will be used with the rear room pole.



Step 5: Clip plastic hooks to the fiberglass tent poles.

 
Step 6: Next, locate the longer pole of the three remaining tent poles (B) and insert through the side sleeve of the roof of the tent, over the front door. This pole should cross over the main tent pole. With a person at each end of this pole, flex the pole and place the ferrules at the end of the pole over the pin at the base of the tent, below the side windows. Clip tent to frame.

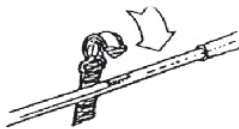


Step 7: Stake down tent by inserting the plastic stakes through the stake loops at the base of the tent. Hammer stakes into the ground at a 45-degree angle, making certain to pull tent out even and tight

Step 8: To assemble the rear tent room, insert the rear tent pole (C) to see to the sleeve above the rear room. With a person on each of the pole, flex the pole into an arch and place the ferrules at the pole ends over the open metal pin at tent base. Clip tent to frame.

 Tent should appear as shown:

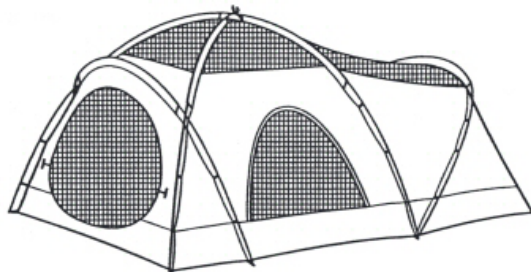


 Step 9: Unfold fly and place over tent, making sure the awning is over the front door and the fly extension over the rear tent room. Attach the hooks located at the fly corners to the rings at the base of the tent. Fasten the Velcro fasteners at each corner of the fly to the fiberglass frame.



Step 10: Insert the fly pole (D) into the sleeve found at the very front edge of the fly, over the front door. Flex the fly pole and place the one metal end tip into the reinforced metal grommets located on the tent above the front door.

 Step 11: Guy ropes are included for your tent fly. Attach the two longer guy ropes to the loops sewn to the fly on either side of the rear door. Make a loop at the opposite end of the guy rope by using the plastic slider and place loop over tent stake. Adjust tension to make rope tight and stake into the ground.

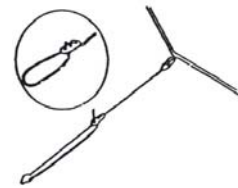

Step 12: Attach the two remaining guy ropes to the loops sewn to the edge of the fly over the side windows. Repeat in the same procedure as outlined in step 11, stake down these guy ropes.

Tent should appear as shown:



Your tent comes with a divider curtain, which can be attached to the inside of your tent to divide tent into separate rooms for privacy. There is also a mud mat for your convenience and help them to keep your tent floor clean. Stake down the mud mat with the pin stakes being inserted into the grommets at the end of the mat and stake to the ground.

Note: To take down tent, follow steps above and the reverse order. Be sure to leave doors and windows unzipped. Place stakes into stake bag and poles into pole bag, which are provided.

The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay it on top of tent. Start a small tight roll, the width of your carry bag, with the pole bag placed at the end opposite the door. Roll tent toward door to allow air to escape. Once rolled, secure with straps. Slide tent and stake bag into carry bag. Make sure tent is clean and dry before storing. To prolong the life of the tent floor, always select a level, clean area for the campsite. Store in a dry area off of concrete floor.



Assembly Instructions

Warning!

Keep all flame and heat sources away from this tent fabric.

This tent is made with flame resistant fabric, which meets CPAI-84 specifications. **It is not fireproof.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render flame-resistance properties ineffective.

Danger:

Stoves, lanterns, candles, grills, heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in this tent. Use of such devices in this tent will cause asphyxiation, carbon monoxide poisoning, and death or serious and permanent injuries. For this reason:

DO NOT ...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.

Do ...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

Do not leave your tent set up in direct sunlight longer than necessary.

The sun's ultraviolet (UV) light degrades almost every fabric and material. If left in sunlight for prolonged periods of time, fabric will fade and weaken. UV damages not covered by the manufacturers warranty. Do not store tent on concrete floor.

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to ridged specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the frame to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.

Send your request for parts to:

American Recreation Products, Inc.
1224 Fern Ridge Parkway
St. Louis, MO 63141-4451

 


Maker of the Genuine Swiss Army Knife

Replacement Parts

If you have questions or need to order a part, call 888 797-2769
Have your model number and part number ready when you call.

Do not order by reference Key number

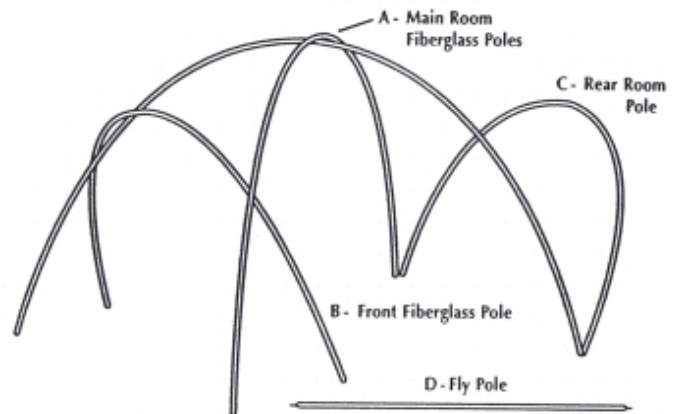

Key Number	Model No. WG31202		Qty. Req.
	Description	Part Number	
A	Main room fiberglass pole	01-0016	2
B	Front fiberglass pole	01-0051	1
C	Rear fiberglass pole	00-0016	1
D	Fiberglass fly pole	03-0028	1
	Complete frame	WG31202FR	1
	Replacement fly	WG31202FLY	1
	Divider curtain	WG31202DC	1
	Mud mat	WG31202MAT	1
	Plastic stakes	7.5 Stake-WG	12
	Metal stakes	Pin Stake	4
	Guy ropes	A1001-WG	4
	Carry bag	WG31202BAG	1

If you have any questions you may also visit our website at: www.camping-n-gear.com